



Initial Filling Instructions

1

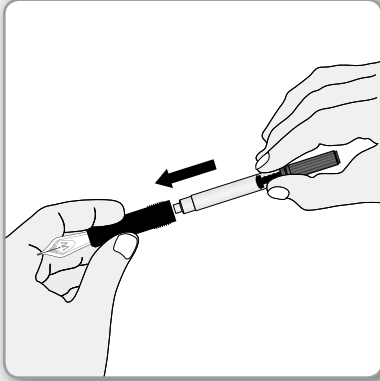


Insert the Original Gusswerk ink converter into your fountain pen.


2

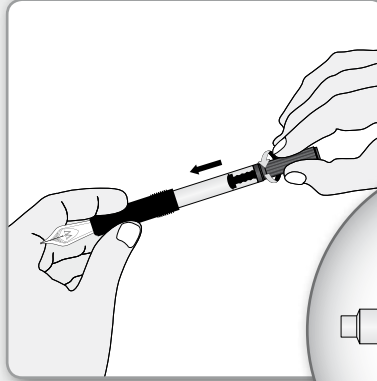

Turn the ink converter counter-clockwise to zero position.

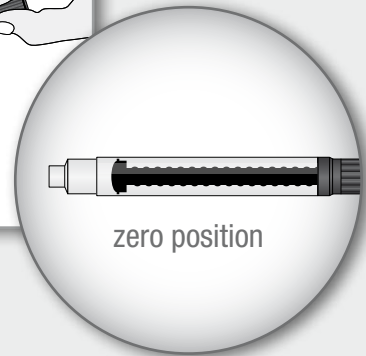


3

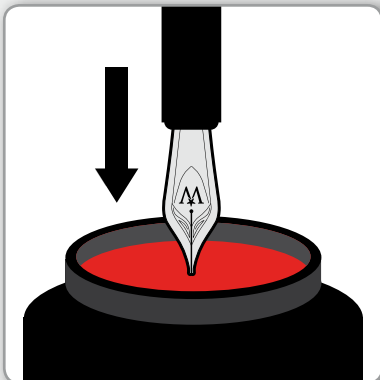


Dip the entire nib into an inkwell and mind that all blades are submerged.


4

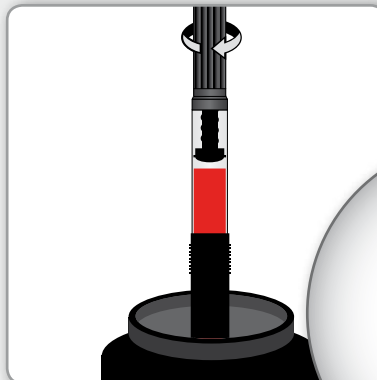

Turn the ink converter clockwise until it is completely filled with ink.

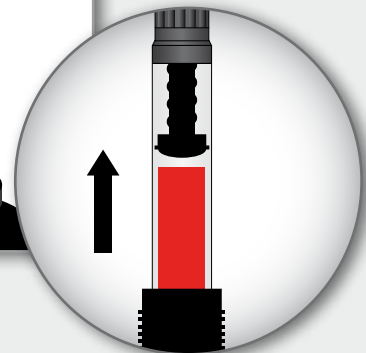


5

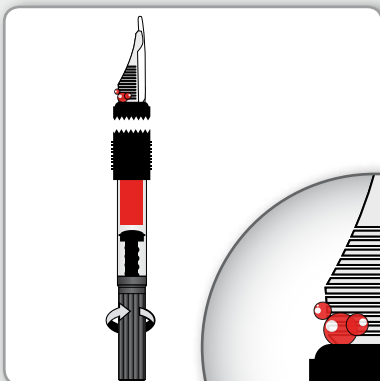

Bring your fountain pen in a vertical position (nib pointed upwards) and turn the ink converter counter-clockwise until bubbles emerge from blades.

6

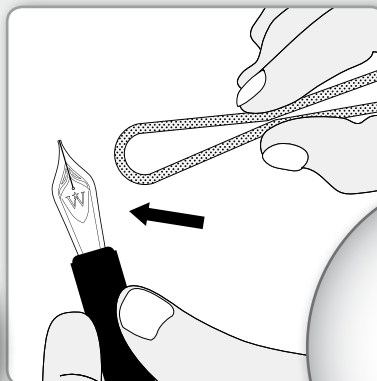

Remove excess ink from nib and blades with a folded napkin.
Happy writing!

